


SEIKO

QUARTZ

Cal. 7518A

PARTS LIST

Cal. 7518A

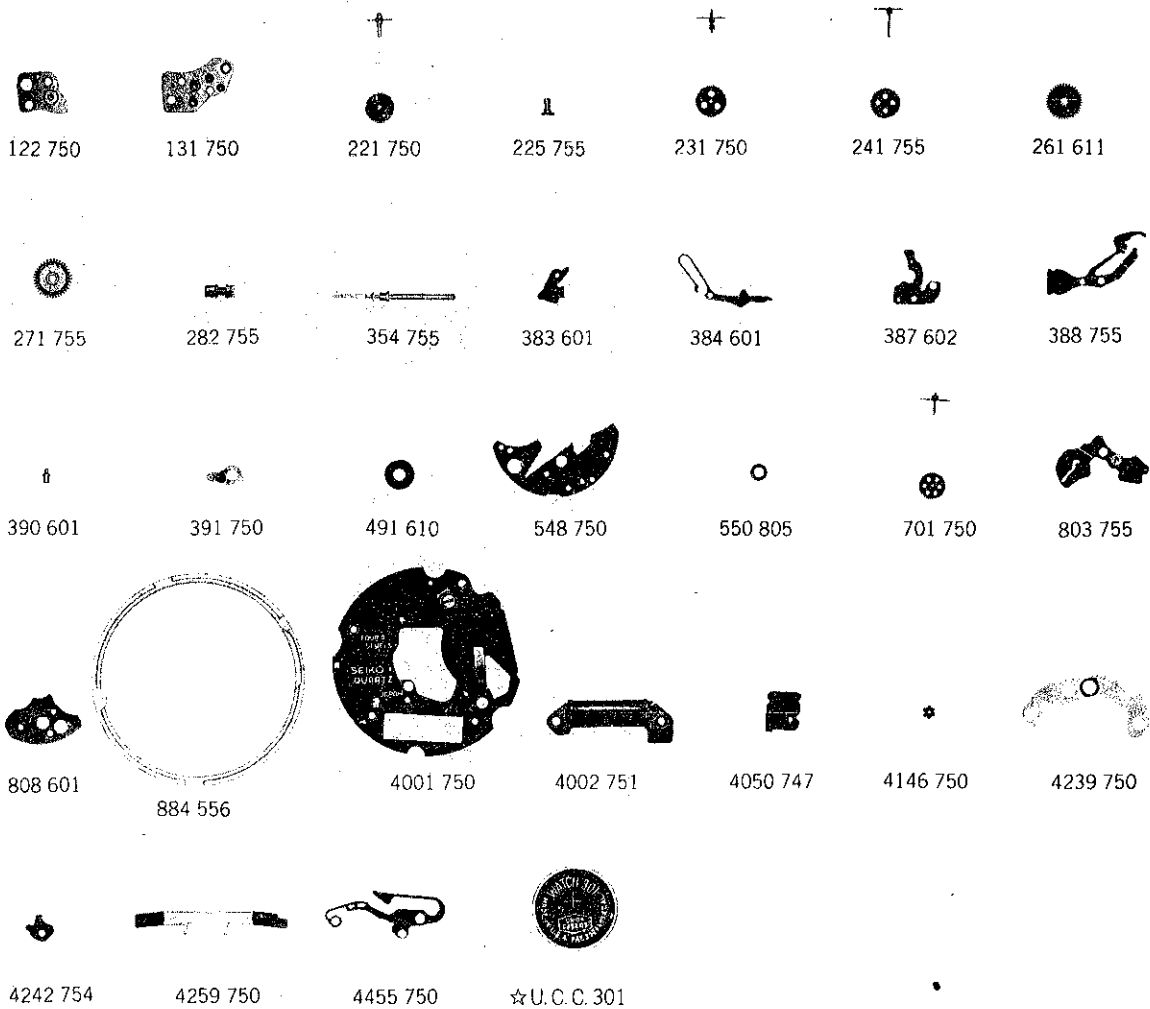

†	†	†	†	†	†
022 257	022 421	022 465	022 468	022 491	022 494
†	†				
022 760	022 761				3/1

☆⇨ Please see remarks on the next page.

Cal. 7518A

Characteristics

Casing diameter : ϕ 27.0 mm
 Maximum height : 4.5 mm without battery
 Jewels : 4 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz = Hertz Cycles per second)
 Driving system : Step motor (2 poles)
 Regulation system : Trimmer condenser

PART NO.	PART NAME	PART NO.	PART NAME
122 750	Center wheel bridge	022 468	Screw for plus terminal of battery connection
131 750	Third wheel bridge	022 491	Minute wheel bridge screw
221 750	Center wheel & pinion	022 494	Reset lever screw
225 755	Cannon pinion	022 760	Screw for setting wheel lever guard
231 750	Third wheel & pinion	022 761	Dial screw
241 755	Fourth wheel & pinion	011 405	Lower hole jewel for fifth wheel
261 611	Minute wheel	011 405	Upper hole jewel for fifth wheel
271 755	Hour wheel	011 537	Lower hole jewel for step rotor
282 755	Clutch wheel	011 537	Upper hole jewel for step rotor
354 755	Winding stem	☆U. C. C. 301	Silver oxide battery
383 601	Setting lever	☆Maxell SR43SW	
384 601	Yoke (Clutch lever)	☆SONY EVEREADY 301	
387 602	Minute wheel bridge		
388 755	Setting lever spring		
390 601	Setting lever axle		
391 750	Second setting lever		
491 610	Dial washer		
548 750	Setting wheel lever guard B		
550 805	Friction spring for cannon pinion		
701 750	Fifth wheel & pinion		
803 755	Setting wheel lever complete		
808 601	Setting wheel lever guard A		
884 536	Holding ring for dial		
4001 750	Circuit block		
4002 751	Coil block		
4050 747	Circuit bridge plate		
4146 750	Step rotor		
4239 750	Rotor stator		
4242 754	Plus terminal of battery connection		
4259 750	Anti-magnetic shield plate		
4455 750	Reset lever		
022 257	Setting lever spring screw		
022 421	Case screw		
022 465	Minute hand screw		
022 468	Third wheel bridge screw		
022 468	Center wheel bridge screw		
022 468	Circuit block screw		

Remarks :

Battery

- ☆ U. C. C. 301
- ☆ Maxell SR43SW
- ☆ SONY EVEREADY 301

The applied battery for this calibre might be added the substitutive in the future.
In that case, please refer to separate "BATTERIES FOR SEIKO QUARTZ WATCHES".

☆ ⇨ Please see remarks.

Part numbers in light letters are not shown in photos.