

PARTS LIST

CAL. Y100A

Cal. Y100A	
PART NO.	PART NAME
125 755	Train wheel bridge
*221 759	Center wheel & pinion
231 755	Third wheel & pinion
241 769	Fourth wheel & pinion
261 755	Minute wheel
*271 768	Hour wheel
281 755	Setting wheel
282 765	Clutch wheel
354 765	Winding stem
383 755	Setting lever
384 755	Yoke
388 765	Setting lever spring
391 755	Second-setting lever
491 589	Dial washer
701 755	Fifth wheel & pinion
4001 755	Circuit block
4002 755	Coil block
4146 755	Step rotor
4239 755	Rotor stator
4270 755	Battery connection (-)
4271 770	Battery connection (+)
022 247	Train wheel bridge screw
022 247	Battery connection (-) screw
022 247	Battery connection (+) screw
022 247	Setting lever spring screw
011 325	Upper hole jewel for forth wheel
011 547	Lower hole jewel for step rotor
011 568	Upper hole jewel for step rotor
027 112	Tube for train wheel bridge (A)
027 113	Tube for train wheel bridge (B)
027 114	Tube for battery connection (+) screw (A)
027 115	Tube for battery connection (+) screw (B)
027 116	Tube for battery connection (+) screw (C)
027 117	Tube for battery connection (+) screw (D)
027 118	Tube for setting lever spring
027 120	Tube for battery connection (-) screw
027 739	Setting lever pin
MAXELL SR920SW SEIZAIKEN	Battery

TR920SW

Remarks:

* Center wheel & pinion and Hour wheel
There are two different types as specified below.

Combination:

Type	Center minute wheel	Hour wheel
a	*221 759	*271 768
b	*221 760	*271 767

PARTS LIST

CAL. Y101A

Cal. Y101A	
PART NO.	PART NAME
125 755	Train wheel bridge
221 768	Center wheel & pinion
231 755	Third wheel & pinion
241 768	Fourth wheel & pinion
261 755	Minute wheel
271 768	Hour wheel
281 755	Setting wheel
282 765	Clutch wheel
354 765	Winding stem
383 755	Setting lever
384 755	Yoke
388 765	Setting lever spring
391 755	Second-setting lever
491 589	Dial washer
701 755	Fifth wheel & pinion
4001 755	Circuit block
4002 755	Coil block
4146 755	Step rotor
4239 755	Rotor stator
4270 755	Battery connection (-)
4271 767	Battery connection (+)
022 247	Train wheel bridge screw
022 247	Battery connection (-) screw
022 247	Battery connection (+) screw
022 247	Setting lever spring screw
011 325	Upper hole jewel for forth wheel
011 547	Lower hole jewel for step rotor
011 568	Upper hole jewel for step rotor
027 112	Tube for train wheel bridge (A)
027 113	Tube for train wheel bridge (B)
027 114	Tube for battery connection (+) screw (A)
027 115	Tube for battery connection (+) screw (B)
027 116	Tube for battery connection (+) screw (C)
027 117	Tube for battery connection (+) screw (D)
027 118	Tube for setting lever spring
027 120	Tube for battery connection (-) screw
027 739	Setting lever pin
MAXELL SR920SW SEIZAIKEN	Battery

TR920SW

Battery