



[Reading the display]

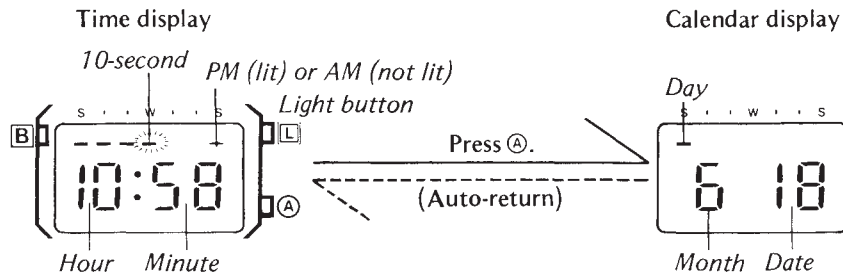

[Setting time and calendar]

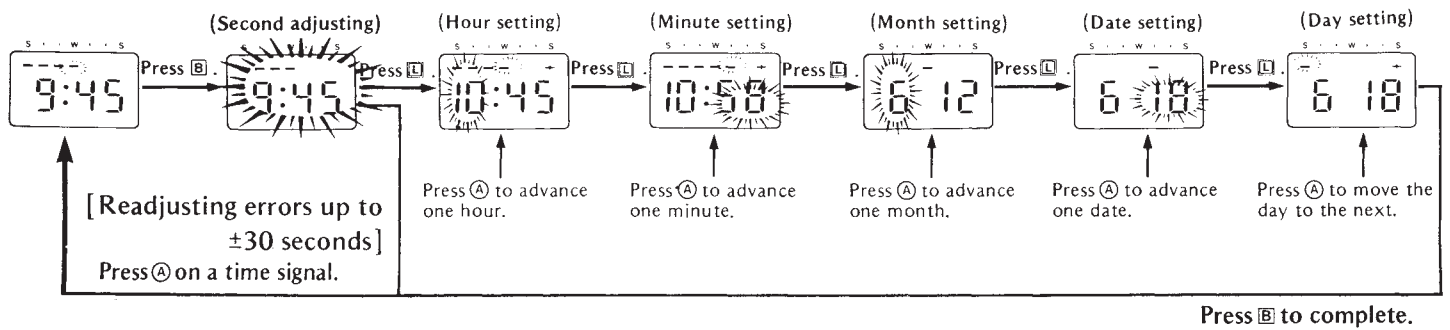

(Independent correction)

Correction of any digit, if not required, can be skipped by pressing the $\square$ button repeatedly.

(Reversion to normal time display)

The watch reverts to the normal time display if the $\square$ button is pressed, regardless of the digit setting mode.

Note: As the calendar system is set at 28 days for February, reset March 1 to February 29 each leap year.