



Module No. 671/838/871

READING THE DISPLAY

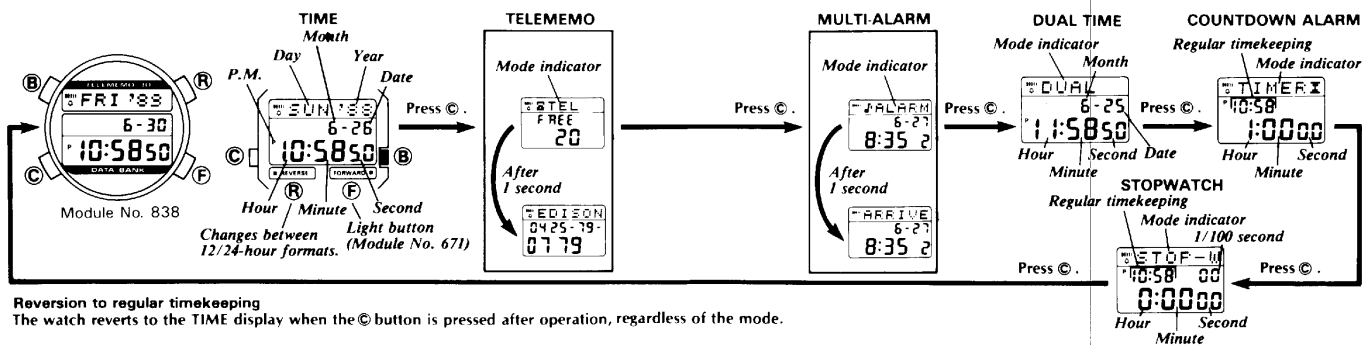

Reversion to regular timekeeping
The watch reverts to the TIME display when the © button is pressed after operation, regardless of the mode.

SETTING TIME AND DATE

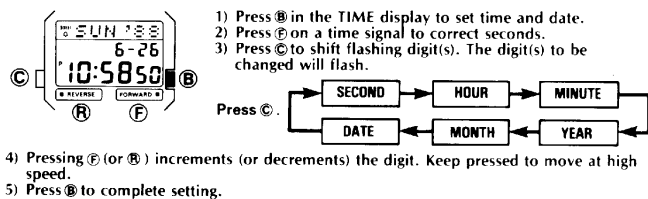


- 1) Press Ⓟ in the TIME display to set time and date.
- 2) Press Ⓞ on a time signal to correct seconds.
- 3) Press Ⓞ to shift flashing digit(s). The digit(s) to be changed will flash.

- 4) Press Ⓞ (or Ⓟ) increments (or decrements) the digit. Keep pressed to move at high speed.
- 5) Press Ⓞ to complete setting.

Auto-retrieve function
The display automatically returns to the TIME display, if left unused for a few seconds.
**Year digits can be set up to the year 2029 by inputting last two digits.*

USING TELEMEMO

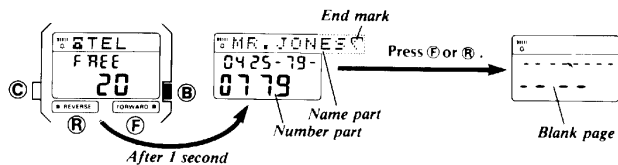


A maximum of 30 sets (pages) of 8 characters and 12 numerals can be stored in memory. Press Ⓞ or Ⓟ to search the memory contents. Keep pressed for high speed search.

Scrolling the display
When the data is entered over 7 characters, the display will continue to scroll from right to left to show all the contents.


MEMORIZING NEW NUMBERS

 - 1) Press Ⓞ or Ⓟ in the TELEMEMO display to search a blank page or numbers to be revised.
- 2) Press Ⓞ to set new letters and numerals.
- 3) 8 characters can be entered in the name part by pressing Ⓞ or Ⓟ. The cursor can be shifted by pressing Ⓞ. Keep pressed for high speed movement.



**To clear all the contents of a page, press both Ⓞ and Ⓟ simultaneously.*

 - 4) 12 numerals can be entered in the number part by pressing Ⓞ or Ⓟ. The cursor can be shifted by pressing Ⓞ. Keep pressed for high speed movement.




- 5) Press Ⓞ to complete setting.

Auto-retrieve function

The display automatically returns to the initial TELEMEMO display if left unused for a few minutes.

USING MULTI-ALARM

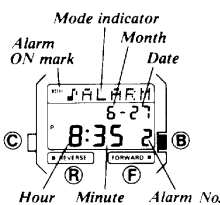


Five alarms with 8-character title can be set independently. There are four different usages—Daily alarm, Monthly alarm, Daily alarm for 1-month period or Date alarm. Deeper sounds for 20 seconds at preset time when alarm is set on. Press any button to stop beeper.


Sound demonstration
Press and hold Ⓞ in alarm mode to sound beeper.

SETTING ALARM TIME

 - 1) Press Ⓞ to select an Alarm No.
- 2) Press Ⓞ in ALARM display to set time, date and title.
- 3) Press Ⓞ to shift flashing digit(s). Digit(s) to be changed will flash.



 
- 4) Pressing Ⓞ (or Ⓟ) increments (or decrements) the digit. Keep pressed to move at high speed.
- 5) 8 characters can be entered in the title part by pressing Ⓞ or Ⓟ. The cursor can be shifted by pressing Ⓞ. Keep pressed for high speed movement.



**To clear the contents of a page, press both Ⓞ and Ⓟ simultaneously.*

ALARM-ON/OFF SETTING

In each ALARM display, every Ⓞ button is pressed, the alarm will be ON or OFF. When the time signal is ON, the watch chimes every hour on the hour.

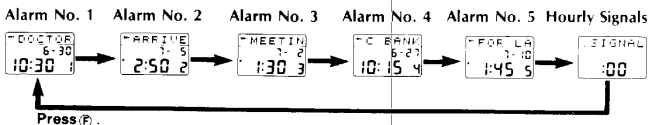


Auto-retrieve function

Display automatically returns to initial ALARM display if left unused for a few minutes.
**Alarm time is displayed in the 24-hour system when timekeeping is in 24-hour system.*

4 types of alarm

Daily alarm	ARR --- 2:50	Month and date not set	Beeper sounds at preset time every day
Monthly alarm	ARR -- 10 2:50	Only date set	Beeper sounds on preset date and time once every month
1 month alarm	ARR (12) --- 2:50	Only month set	Beeper sounds at preset time every day during the set month
Date alarm	ARR (12-10) 2:50	Month and date set	Beeper sounds at preset time, month and date

SETTING DUAL TIME

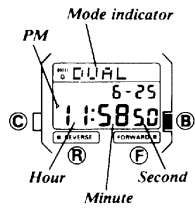

- 1) Press **[STOP]** in DUAL TIME to set new time.
- 2) Pressing **[REVERSE]** (or **[STOP]**) increments (or decrements) the digit. Keep pressed to move at high speed.
- 3) Press **[COUNTDOWN]** to shift flashing digits.




- 4) Press **[STOP]** to complete setting.
*Press **[REVERSE]** to change the dual time between 12-hour and 24-hour formats.

Auto-retrieve function

Display automatically returns to initial DUAL TIME display if left unused for a few minutes.


USING COUNTDOWN ALARM

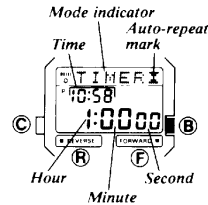

Countdown can be set from 1 minute to 24 hours (display shows 0:00:00), and times to an accuracy of 1 second. Start/stop operation is possible by pressing **[STOP]**, and is confirmed by a signal. When display reaches zero, beeper will sound for 10 seconds until any button is pressed.

SETTING COUNTDOWN TIME

 - 1) Press **[STOP]** in COUNTDOWN ALARM display to set new time.
- 2) Each press of **[REVERSE]** selects auto-repeat or repeat function.
- 3) Pressing **[REVERSE]** increments the digit. Keep pressed for high speed movement.
- 4) Press **[COUNTDOWN]** to shift flashing digit(s).



Auto-retrieve function

Display automatically returns to initial COUNTDOWN ALARM display if left unused for a few minutes.

- 5) Press **[STOP]** to complete setting.

Auto-repeat function

Pre-entered time is retrieved and started again when display reaches zero.

Repeat function

Pre-entered time is retrieved when display reaches zero.

OPERATING STOPWATCH

 
Mode indicator 1/100 second




A signal confirms start/stop and split/reset operation.
(Working range) Total elapsed time display is limited to 23 hours 59 minutes 59.99 seconds. For longer times reset and start again.

Hour Minute Second

a) Net time measurement



 b) Split time measurement



c) 1st-2nd place times

