



[Changeover between 12-hour system and 24-hour system]

While showing calendar by pressing [Light], press [Mode] to switch between 12-hour system and 24-hour system.

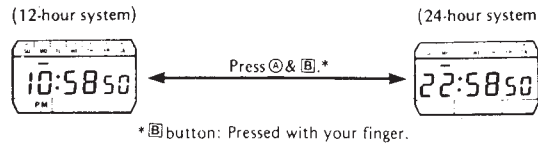

### Setting time and calendar

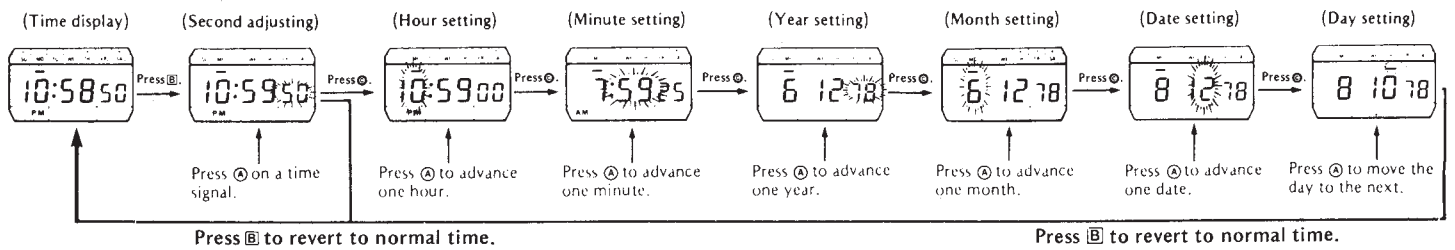


(Independent correction) Correction of any digit, if not required, can be skipped by pressing the [Mode] button repeatedly.


(Reversion to normal time display) The watch reverts to the normal time display if the [Light] button is pressed, regardless of the digit setting mode.

(Automatic digit advance) When the [Mode] button is kept depressed for more than two seconds, the digit advances automatically. When released, the digit advance will stop.

### Operating the stopwatch

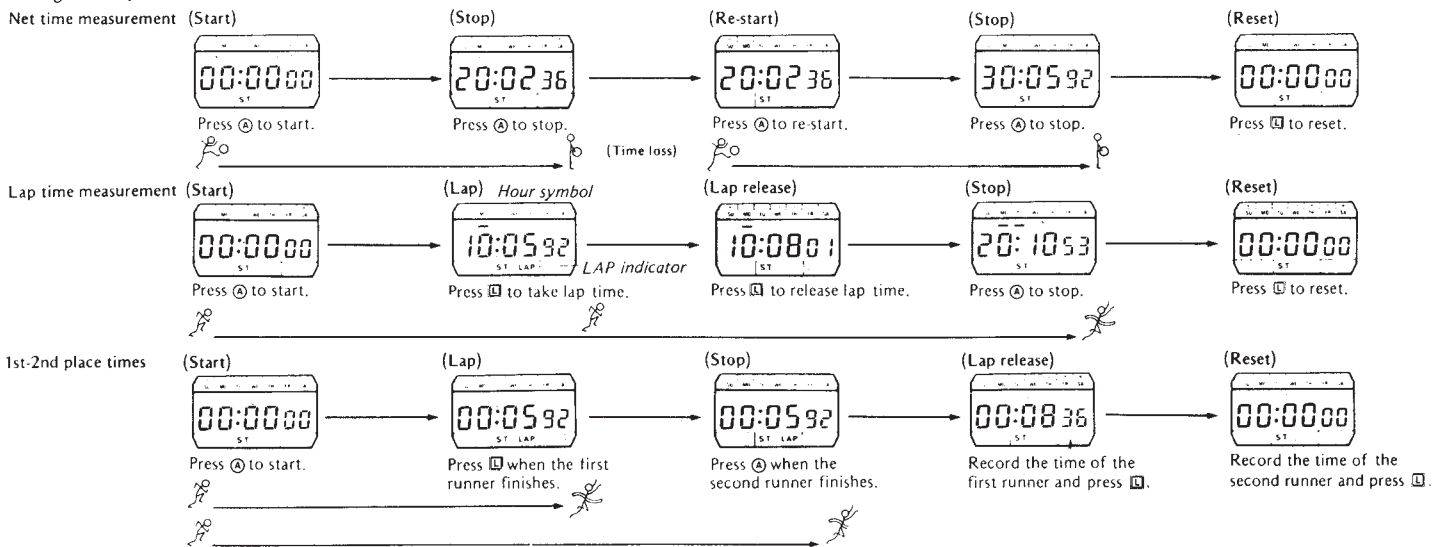

### Setting alarm time

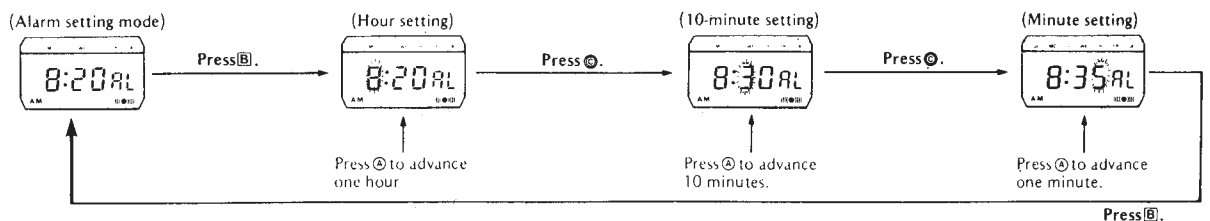

Every time the [Light] button is pressed in the alarm setting mode, the alarm-ON-mark appears or disappears. When the alarm-ON-mark is lit, the buzzer sounds for 30 seconds at the preset time every day until cleared. (Sound demonstration) While the [Mode] and [Light] buttons are pressed simultaneously, the buzzer sounds.

### Setting the time signal

Every time the [Mode] button is pressed in the alarm setting mode, the display changes between "AL" and "-". When the display of "-" is shown, the watch chimes the hour one second regardless of the preset alarm time.

