




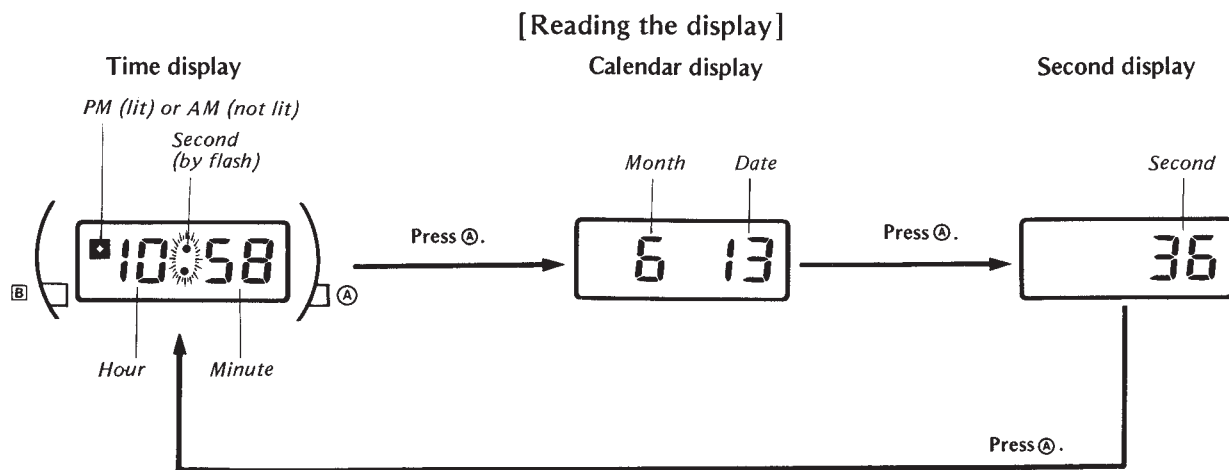

[Readjusting errors up to ± 30 seconds (Example: 7:00 AM)]

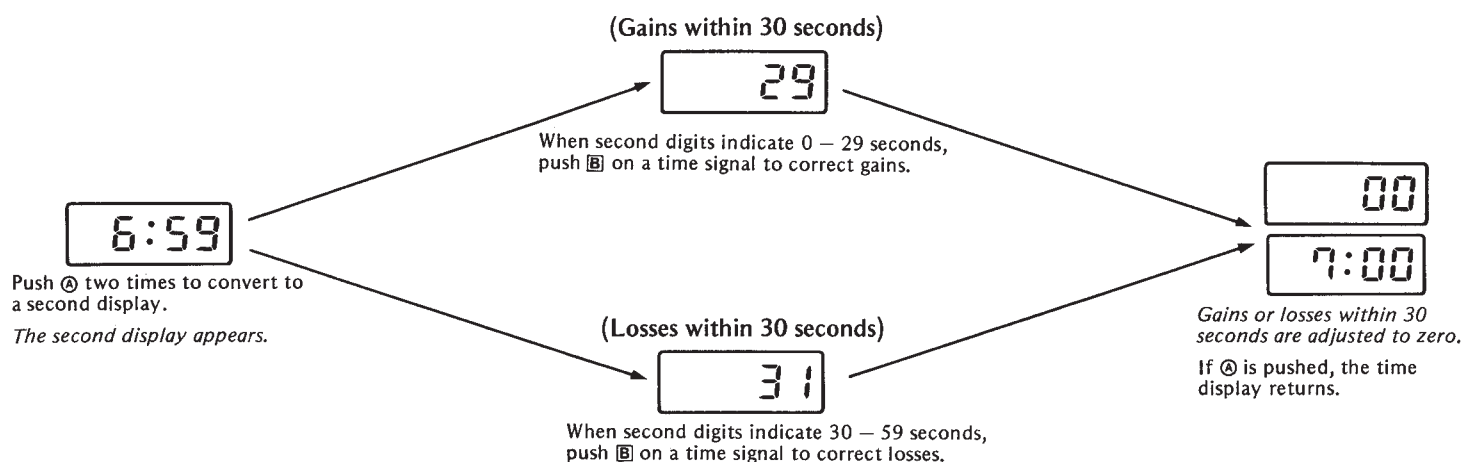

[Setting time and calendar]

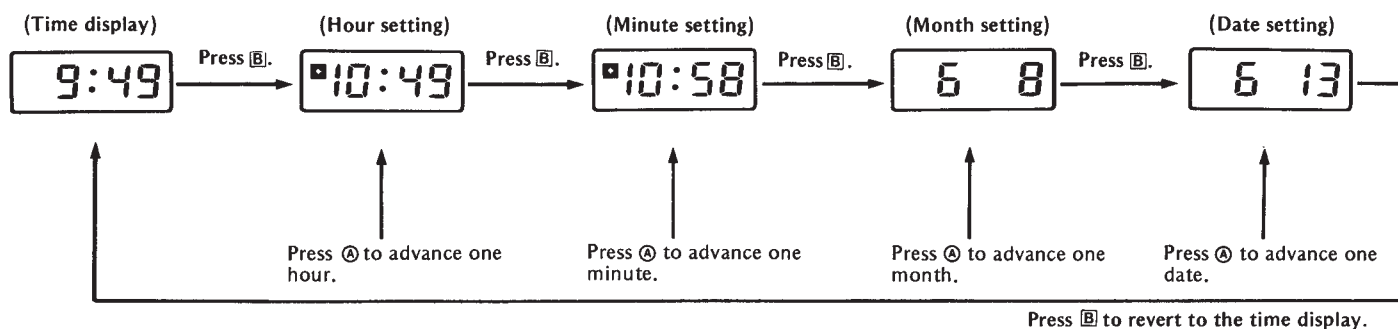

(Independent correction)

Correction of any digit, if not required, can be skipped by pressing the **B** button repeatedly.

(Reversion to normal time display)

The watch can revert to the normal time display with the **B** button pressed for more than 2 seconds.

(Quick digit advance)

When the **A** button is kept to press for more than 2 seconds, the digit advances every $\frac{1}{2}$ second.

When released, this quick digit advance will stop.

Note: As the calendar system is set at 29 days for February, reset February 29 to March 1 except leap year.